



What's in the box

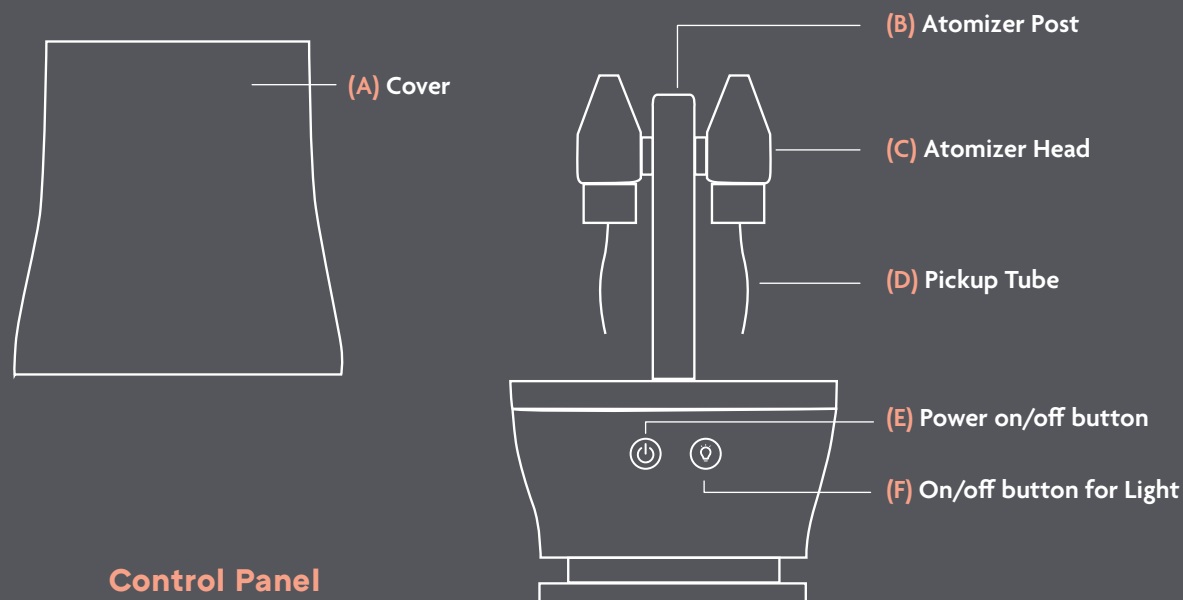

Control Panel

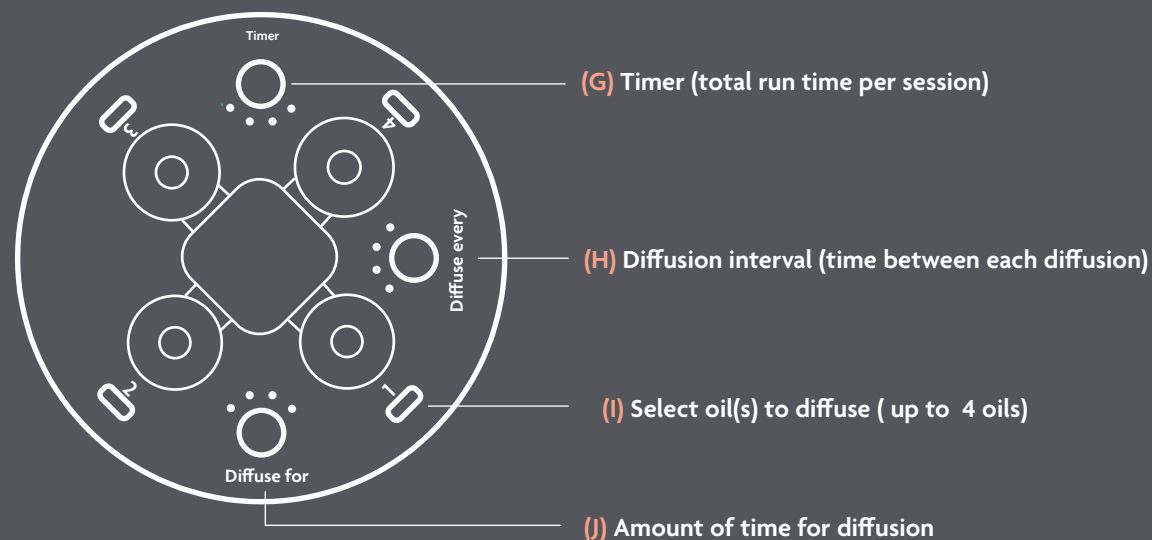

Get Started

1. Remove Cover
2. Pull up and out the atomizer heads
3. Unscrew oil bottle cap, remove clear plug and screw atomizer head onto the bottle
4. Reattach atomizer head to Atomizer Post



Now you are ready to diffuse

1. Turn on your Aromatru (E)
2. Select oils to diffuse (I)
3. Set amount of time to diffuse each oil (G)
4. Set wait time between each diffusion of oil (H)