

Configuration A to D



AQUATru[®]
BY IDEAL LIVING


PRO SERIES

On-Wall Bi-Level Bubbler
with Bottle Filler

Configuration A to D


STEP
1

Gently tip the MAIN unit onto its back.

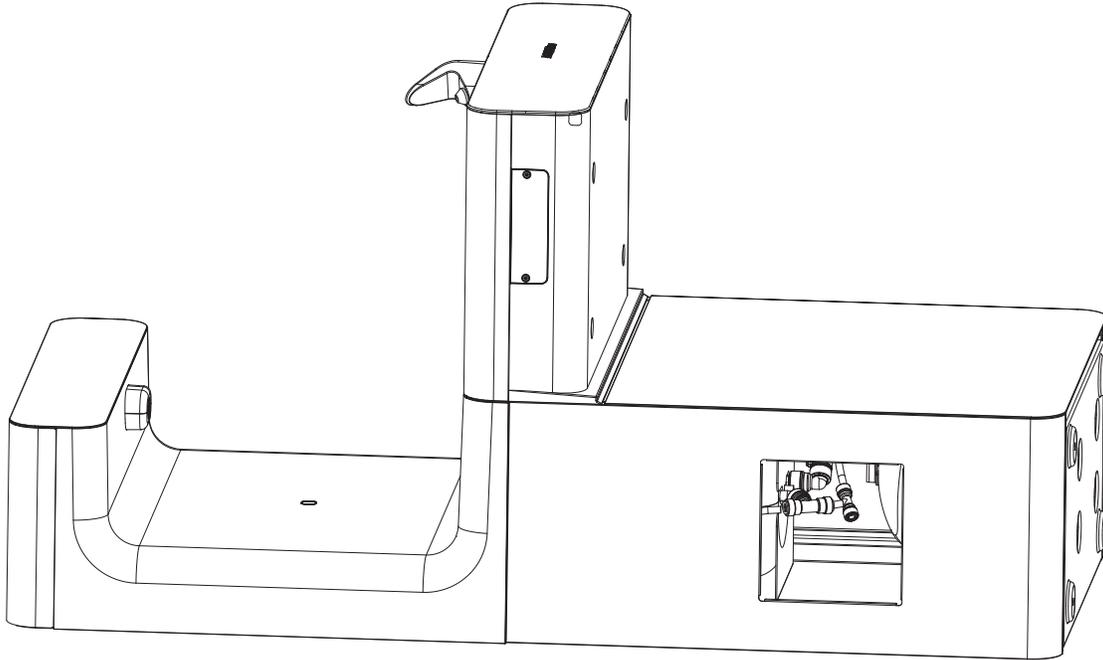

STEP
2


Undo the two screws that secure the front panel.

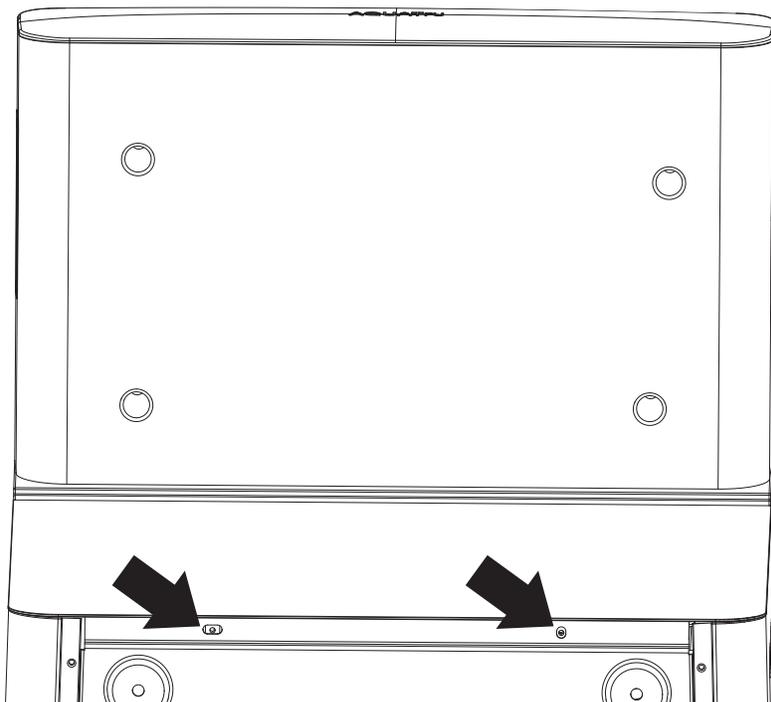

Configuration A to D


STEP
3

Gently push the panel up from the bottom and lift it from the top to remove it.

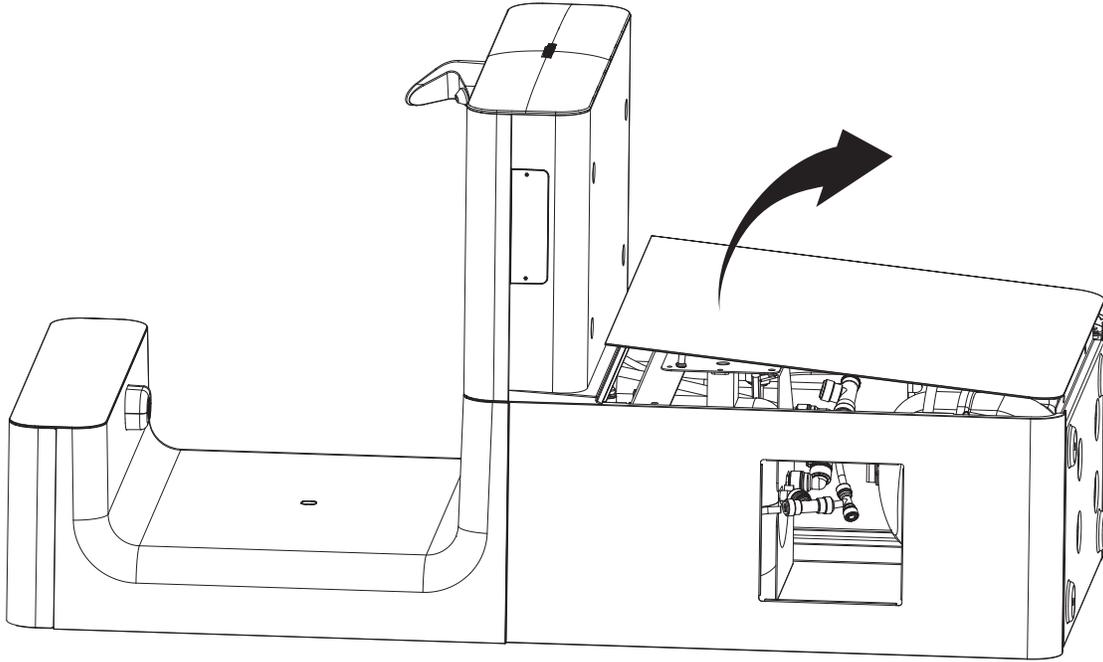

STEP
4


Remove the 4 screws that hold the plastic underside of the basin.

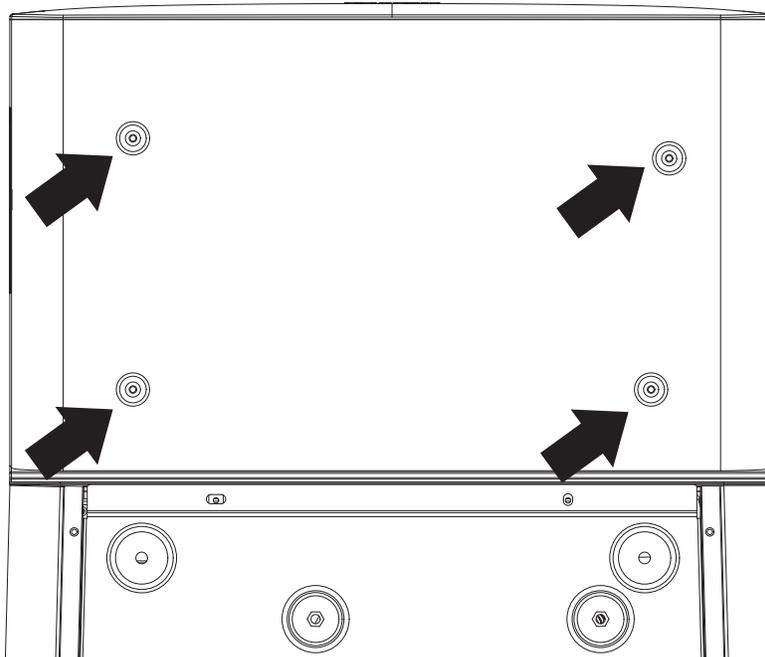

Configuration A to D


STEP
5

Remove the six screws that hold the Plastic Bottle Filler to the Frame. There are four on the front of the cabinet and two in the back.

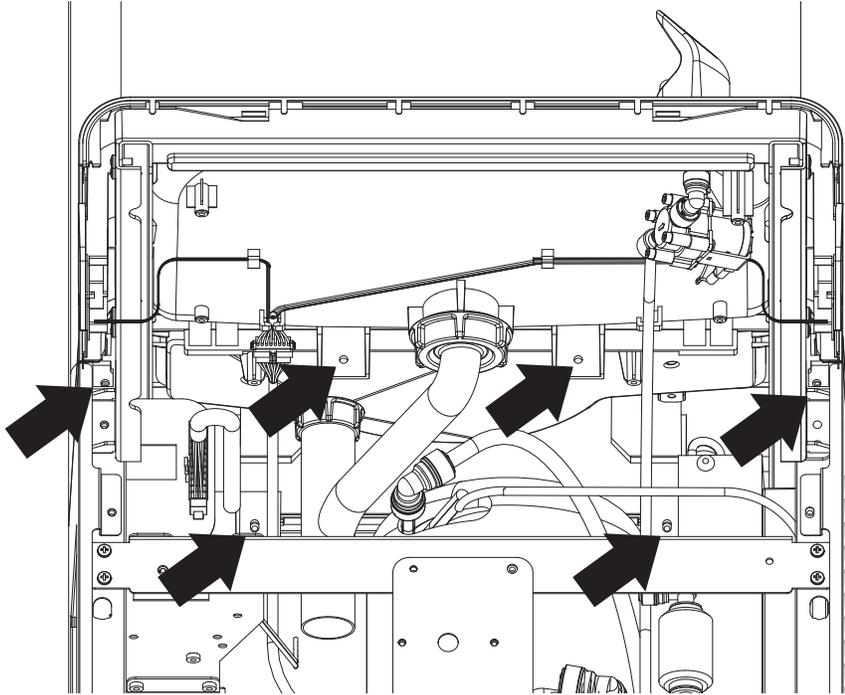

STEP
6


Unscrew the drain boot retaining collar under the bottle filler.

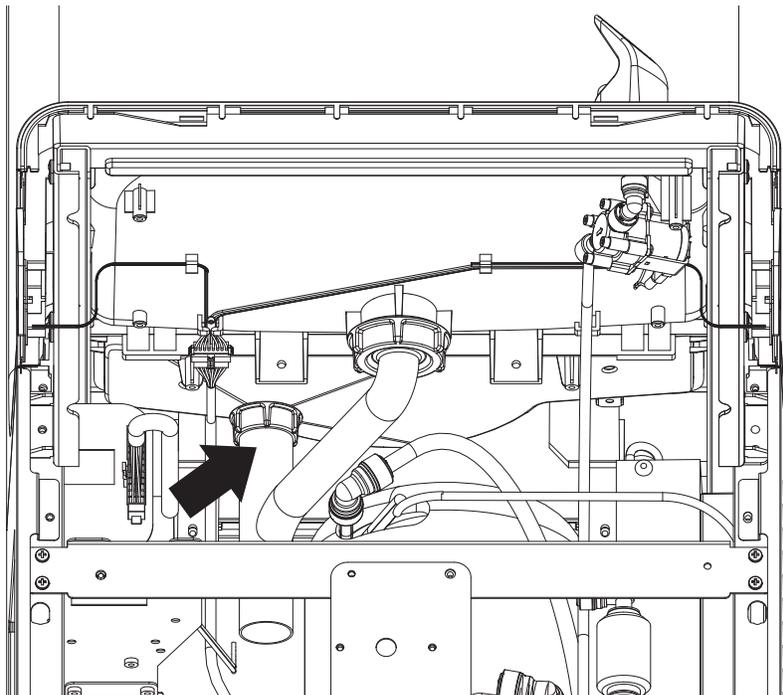

Configuration A to D


STEP
7

Gently lift plastic bottle filler and basin off of the frame and stand the frame upright. **BE CAREFUL OF ANY WIRES OR TUBES.**

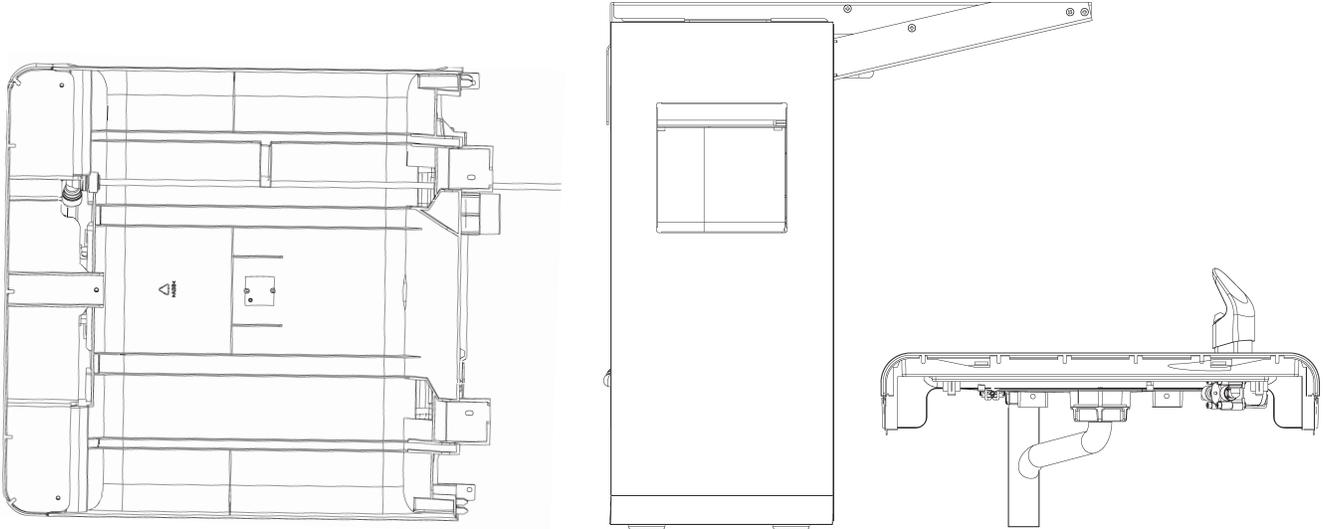

STEP
8


Now take the shell unit and gently tip it over on its back.

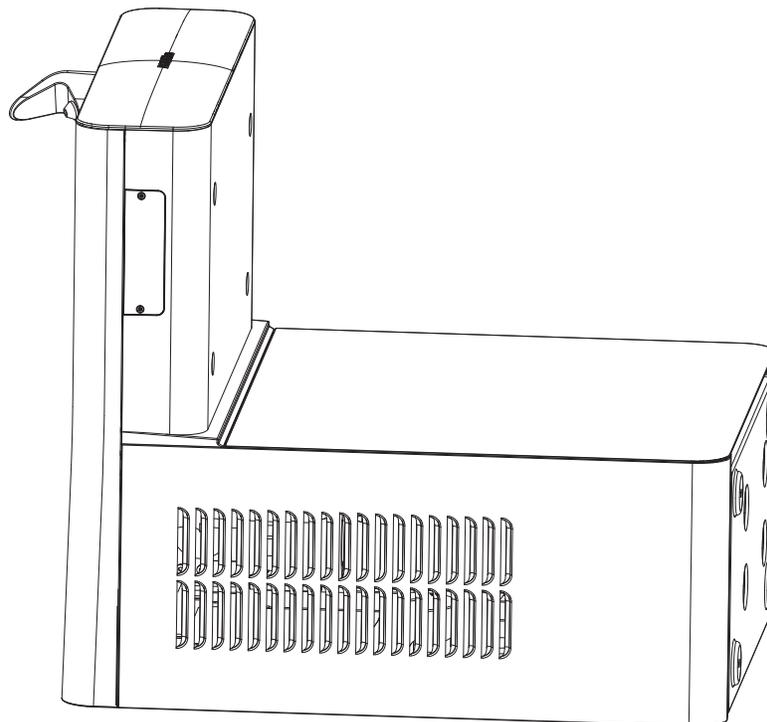

Configuration A to D


STEP
9

Remove the two screws that secure the front panel and the four screws holding the plastic underside of the bubbler.

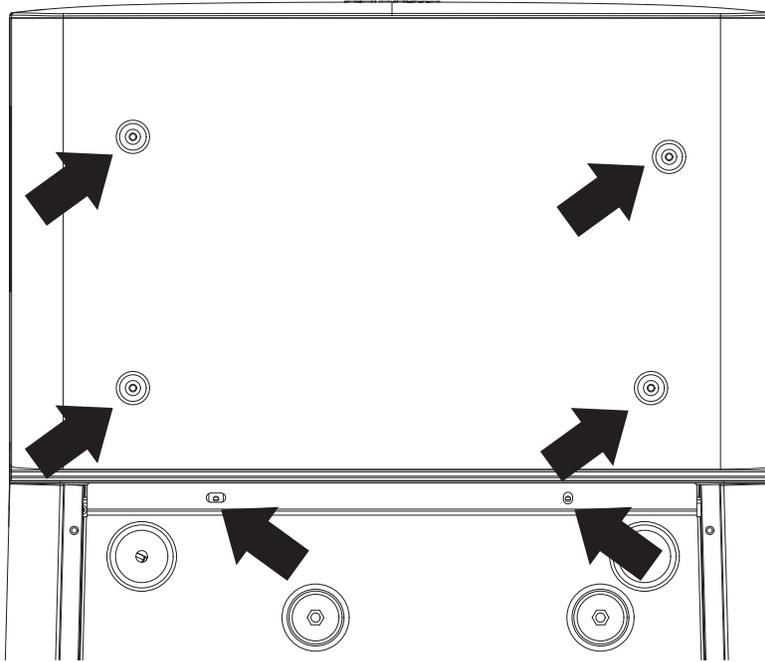

STEP
10


Remove the two screws located inside the back of the unit and the two screws (one on each side) at the front of the frame.

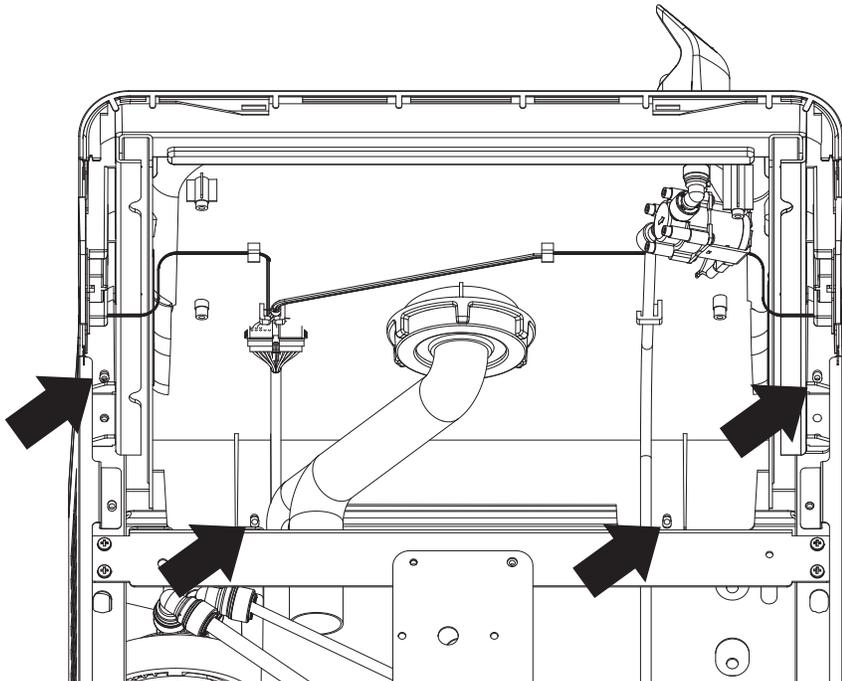

Configuration A to D


STEP
11

Undo the four screws on the under side of the basin.

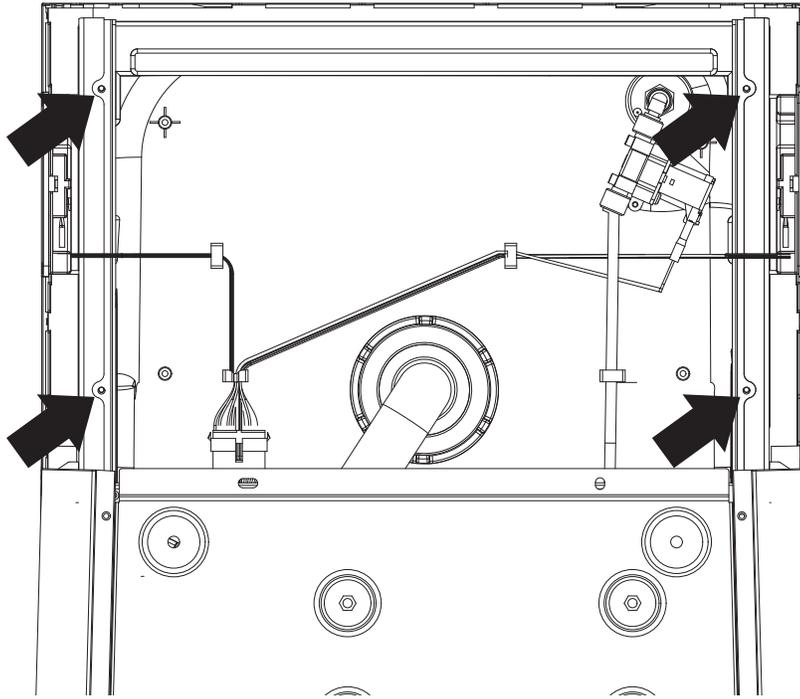

STEP
12


Gently lift and rotate the basin out of your way to expose the basin so you can see the two BLACK Screws on top of the side panel.

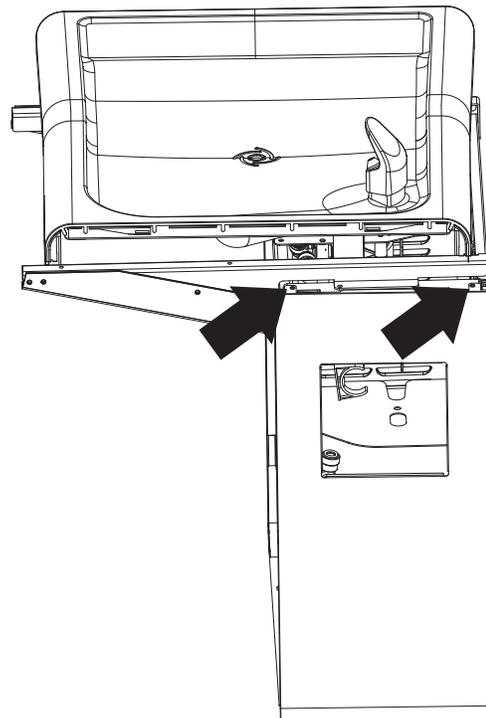

Configuration A to D


STEP 13

Now undo the sixteen screws holding both side panels. There are eight screws on each half of the unit. The two black screws on top, two stainless steel screws on the bottom, and two stainless steel screws on each side.

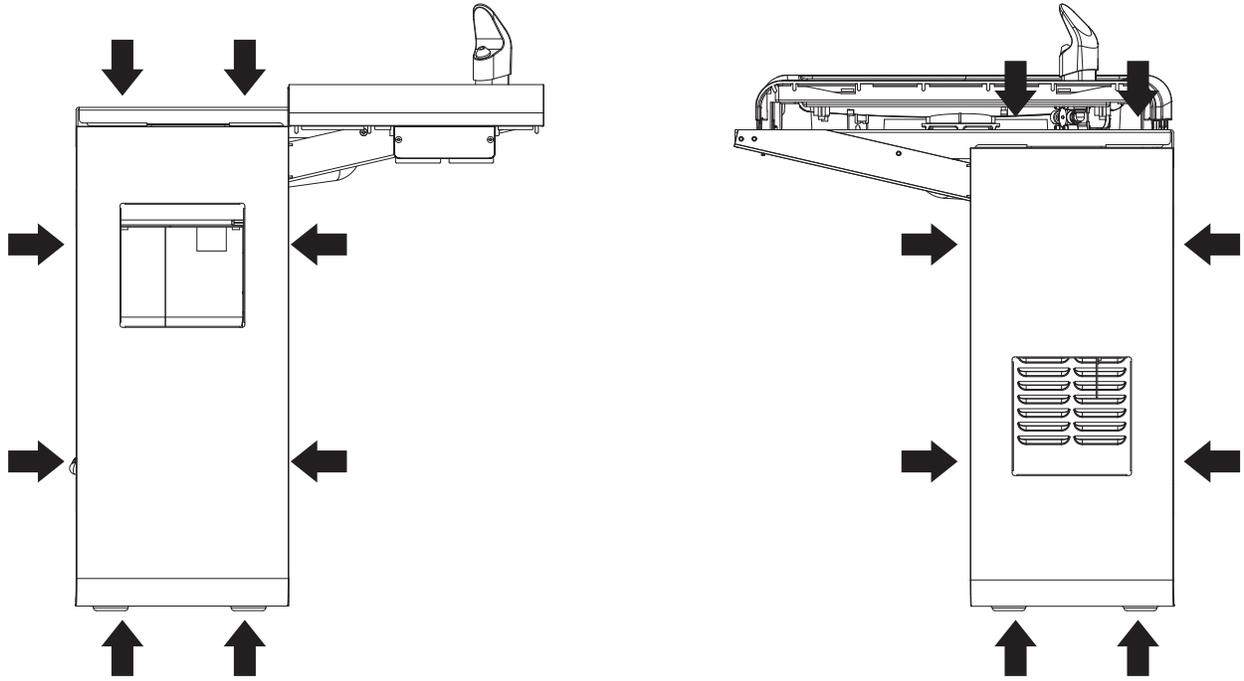

STEP 14


On the shell unit gently lift and realign the basin so that it sits on top of the unit.

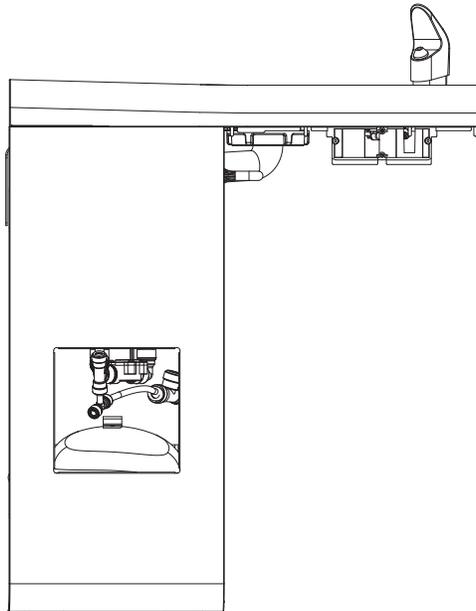

Configuration A to D


STEP
15

Replace the four button headed screws that secure the basin to the frame.

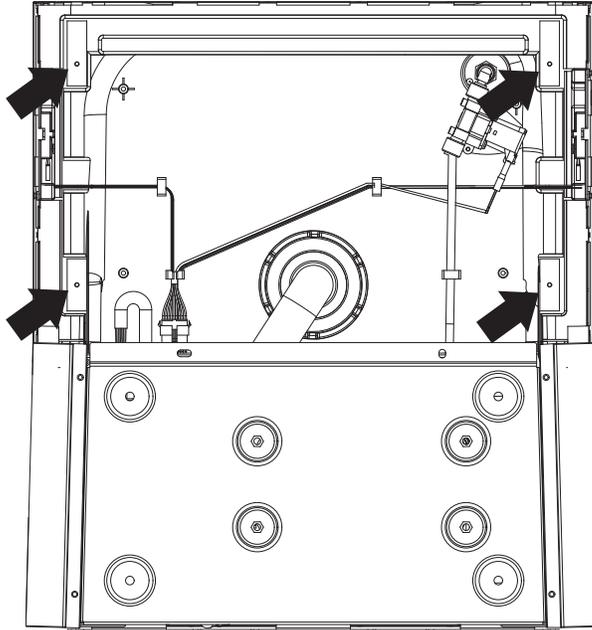

STEP
16


Replace the two screws located inside the back of the unit and the two screws at the front of the frame.

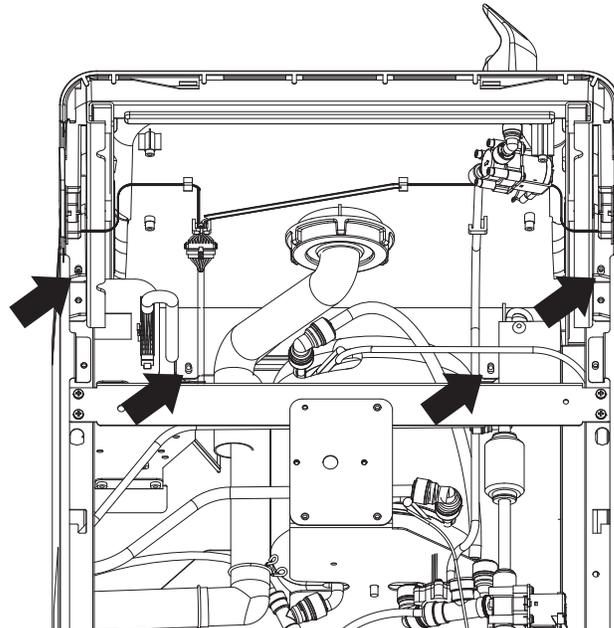

Configuration A to D


STEP
17

Replace the basin underside and secure it with four button headed plastic screws.

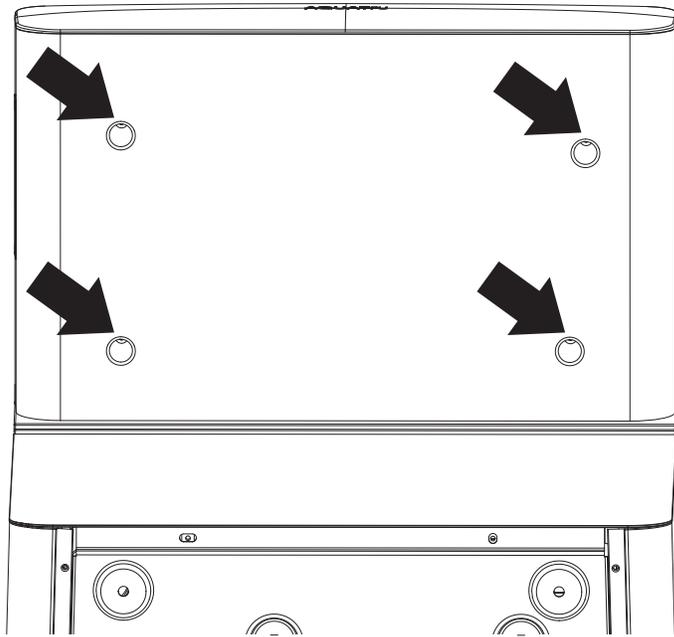

STEP
18


Replace the front panel and secure it with two flanged screws.

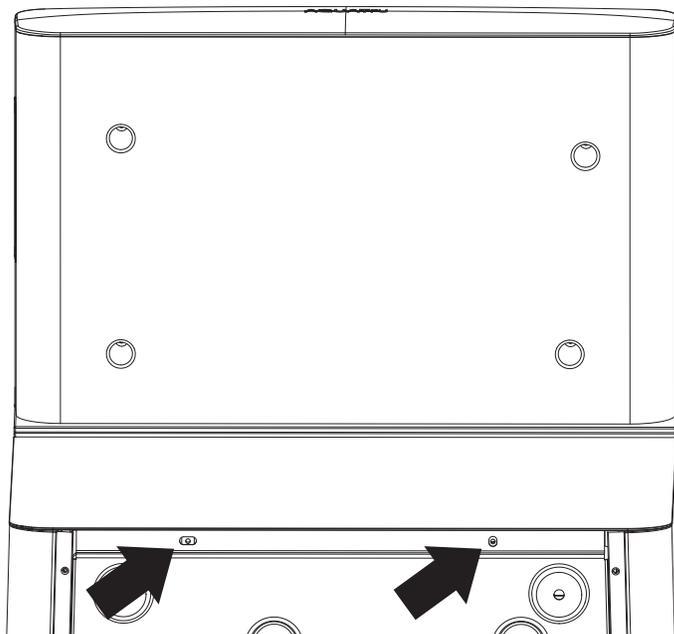

Configuration A to D


STEP
19

Now place the plastic bottle filler and small basin back on top of the main unit, being careful not to pinch and tubes or wires.

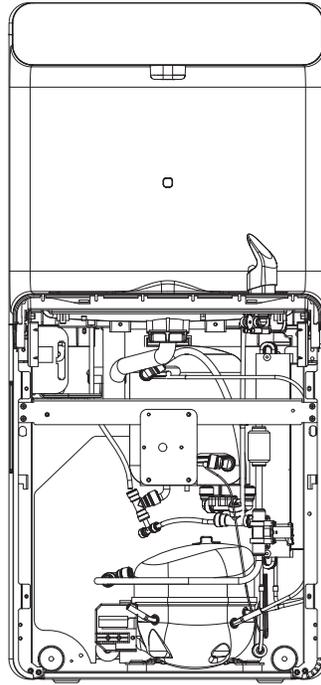

STEP
20


Replace the six flanged screws that hold the bottle filler onto the frame. There are four screws along the front of the unit, and two that can be found inside the cabinet at the back.

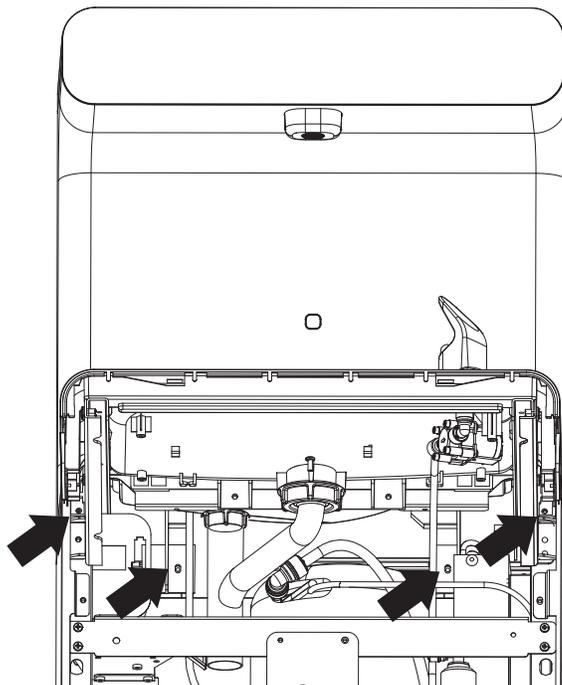

Configuration A to D


STEP
21

Replace the four button headed screws that secure the small basin to the frame.

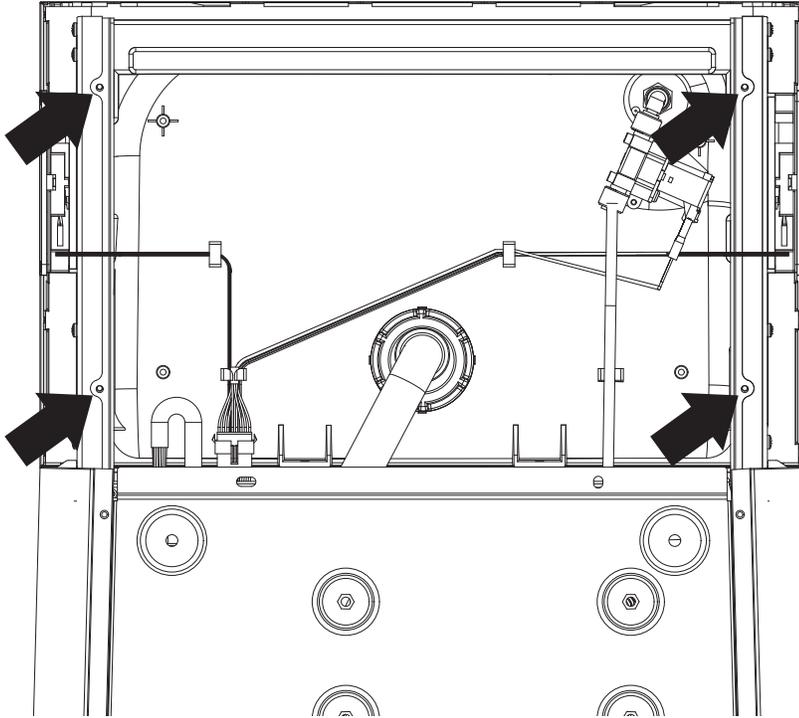

STEP
22

Replace the basin underside and secure it with four Button headed plastic screws.

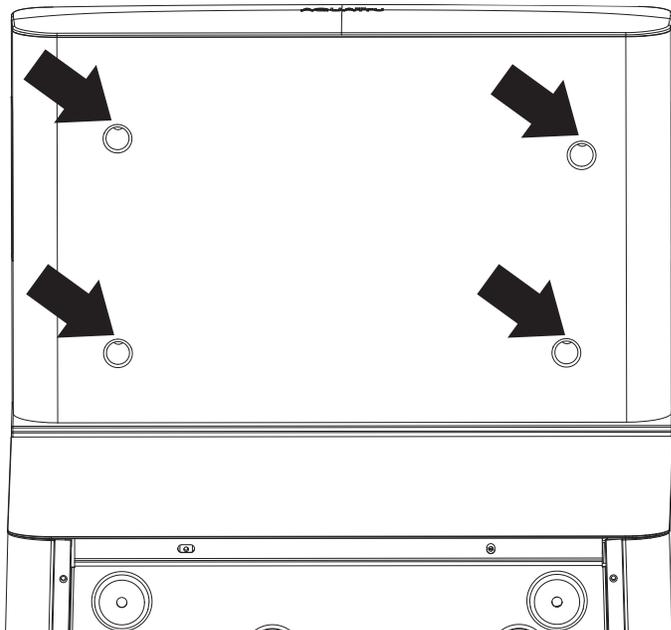

Configuration A to D

STEP
23

Replace the Front panel and secure it with two flanged screws.

