

WARRANTY REGISTRATION

Scan QR code or go to below URL to register your ONE YEAR complimentary Warranty:





Scan this code

airdoctorpro.com/warranty

Perks of being an AirDoctor registered owner:



Exclusive Promotions

Big savings & exclusive promotions for AirDoctor owners.



Helpful Tips

Tips and seasonal advice about how to get the most out of your AirDoctor.



Be in the Know

Registered AirDoctor owners find out first about new technology and product announcements.

Love Your AirDoctor?

Leave a review and help others out by sharing your experience.



AIR Doctor®

Scan this code

airdoctorpro.com/feedback



Breathe Easy Guarantee

AirDoctor is backed by our 30 day Breathe Easy money back guarantee. Try AirDoctor in your home for 30 days. If you do not love it, simply contact us to return the product and receive a full refund of your purchase price, less shipping and processing. No questions asked.

Need Help?

Contact us. We want to help. | airdoctorpro.com/support

Email: info@airdoctorpro.com Toll-Free: 1.800.221.2515 Support Hours

Monday-Friday, 7am-4pm PST/PDT Saturday, 7am-3pm PST/PDT

01.24.R1

◎ f ♪ ▶ Follow Us! @AirDoctorPro

AIR Doctor®

QUICK START GUIDE

AD2500 AIR PURIFIER



INSIDE PANEL

BACK COVER

FRONT COVER

AD2500_Quick_Start_Guide-Product_card_01.24_R2 / 01.18.24


Fold / Trim : 6" W x 9" H (Tri-Fold)
Flat: 18" W x 9" H with .125 bleeds all sides
Color: 4C Process

WARNING!


Read, understand, and follow all instructions and safety information in the Manual before installing and using this product. For wall mounting instructions, please see the product manual.

Getting Started

Before first use, please remove the filters from the packaging, discard any plastic bags, and reinstall the filters.

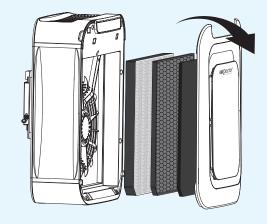

Reinstall front cover. Plug the unit into an electrical outlet. The unit will be ready to run. Read the following directions to select desired settings.

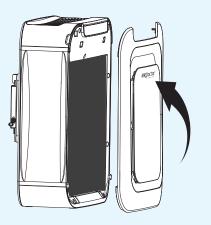

The importance of Genuine AirDoctor Replacement Filters!

Genuine AirDoctor replacement filters are guaranteed by AirDoctor and independently tested to remove dangerous airborne contaminants. Generic (third-party) aftermarket filters may be of questionable quality and may not be tested for effectiveness. They are also not certified to work with AirDoctor. For air quality you can trust, and to maintain the optimal performance you depend on from AirDoctor, always use genuine AirDoctor

Notice: Damage caused by third party replacement filters is not covered by your warranty.

Using Your AirDoctor

Power Control

As soon as you press the power button b, the AirDoctor will start in **Auto** mode. Once Auto mode has been activated, it will start up the high-speed mode, and then the sensor will start to detect the amount of particulate matter in the air. As the particles are detected, the AirDoctor will automatically adjust to the purification speed (fan speed) that is appropriate to the particulate contamination in the room.

In most cases, we recommend that you leave the AirDoctor in Auto mode. For other purification modes, see below.

FOR MAXIMUM EFFECTIVENESS, RUN 24/7 IN AUTO MODE

Air Quality Monitor

The AirDoctor comes with an Air Quality Monitor that continuously monitors the quality of air in a room. The LED indicator light, located on the top of the unit, will change colors based on the air quality in the room. The Air Quality Monitor is able to show three air quality levels.

BLUE = Good air quality

ORANGE = Moderate air quality

RED = Poor air quality

Using Auto Mode

You can choose to set the AirDoctor to **Auto**. This will enable the AirDoctor to adjust the Fan speed according to the Air Quality. In Auto mode, the fan speed will be adjusted as follows:

Good = Low fan speed **Air Quality**


Air Quality


Moderate = Medium fan speed

Poor **Air Quality**

= High and Boost fan speeds

Please Note: The blue light indicates that AirDoctor is maintaining healthy air quality. We recommend that you keep the unit in Auto mode as it will automatically adjust to the purification needs of the room.

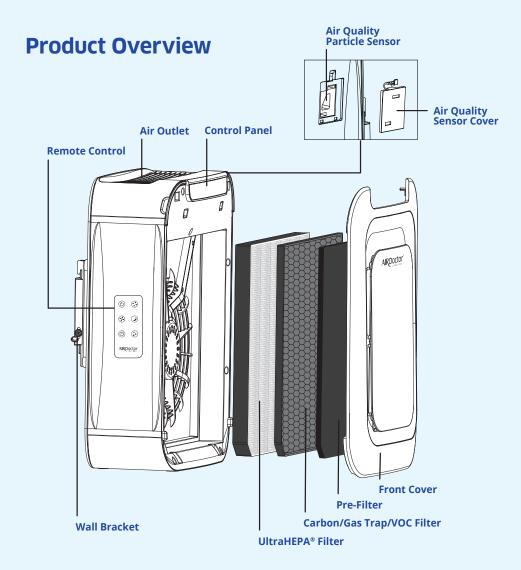

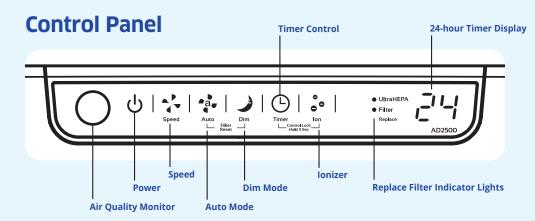

Note: See Product Manual for more details on these functions.